

Instructions for 412601

1. Insert the tool onto the contact until it is flush with the face of the Module body then push the contact out of the module.

