


## CALIBRATION INSTRUCTIONS FOR: MINI-COAX CONTACTS DEPTH GAUGE P/N: 412656

To calibrate the mini-coax center pin depth gauge, P/N 412656 (Fig. 1), loosen the locking screw on the side of the dial until the gauge face turns freely.

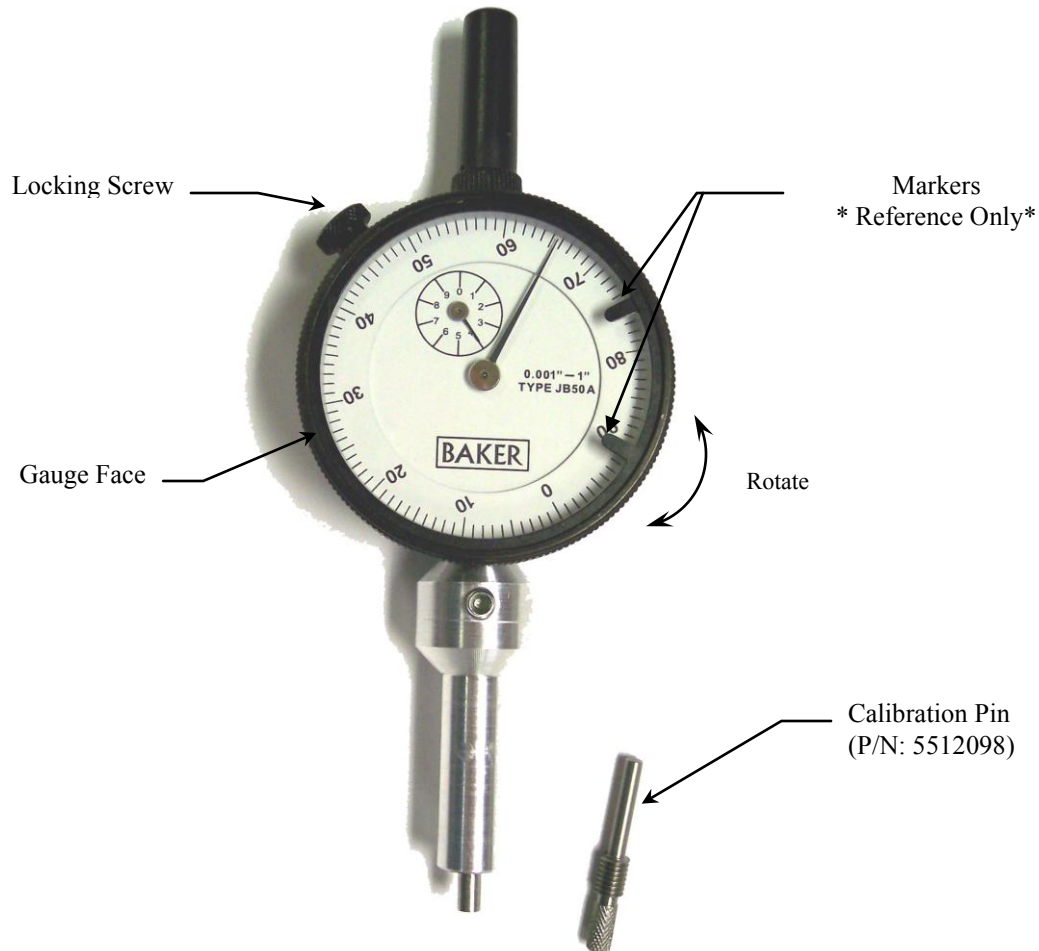

Using the supplied 0.138 diameter calibration pin (P/N 5512098), insert the non-knurled end into the tip at the bottom. Make sure the calibration pin is fully seated, then rotate the dial face until the needle reads “0”. Tighten the locking screw. Set the markers at “90” and “70”. To use the gauge, push the gauge tip over the coax contact until it is fully seated, avoiding the side of the module. The depth of the center pin is good if the needle is between the two markers.

This document prepared by the MAC Panel Company.



551 W. Fairfield Rd.  
High Point, NC 27263  
PH: 336.861.3100 FAX: 336.861.6280  
[www.macpanel.com](http://www.macpanel.com)